



SupremeFM™ SPAFM-300 Wireless Entertainment System

FM Frequency Range: 88 Mhz - 108 Mhz
FCC ID: VEX SPAFM300

FCC Notice: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference and 2) this device must accept any interference received, including interference that may cause undesired operation.

2 Year Limited Warranty

SupremeProAudio
155 Troy Rd., P.O. Box 550
Marlborough, NH 03455

SPAFM-300 SupremeFM Wireless Entertainment System

Warranty:

SupremeProAudio warrants this product to be free from defects in materials and workmanship for two (2) years. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. This warranty does not affect your statutory rights.

If your SupremeProAudio SupremeFM transmitter should be defective and need repair, please call us at 1-800-213-3515 or 1-603-876-3636 for a *Return Authorization Number*. When returning the transmitter for repair, please make sure that there is adequate packing material inside the box to prevent shipping damage. You are responsible for proper shipping.

Please return to:

SupremeProAudio
155 Troy Rd., P.O. Box 550
Marlborough, NH 03455

Mailing Address:
SupremeProAudio
P.O. Box 550
Marlborough, NH 03455-0550

USA & Canada: 800-213-3515
Suppliers & Foreign: 603-876-3636
Fax: 800-346-4867 or 603-876-4001
E-mail: Info@SupremeProAudio.com
Home Page: www.SupremeProAudio.com

Shipping Address:
SupremeProAudio
155 Troy Rd.
Marlborough, NH 03455

SPAFM-300 Operation

Installation and use of the SupremeFM transmitter is extremely easy.

- Connecting:** Using the supplied 1/8" to RCA stereo cable, connect the **Line In** jack on the **SupremeFM™** to the **RCA stereo audio output** jacks on your TV set (or other audio source). Most TV audio output jacks are stereo RCA Phono jacks (some are 1/8" stereo). We provide the RCA stereo cable. **NOTE:** The TV output must be Analog/Line Level, not Digital.
- Plug the AC Adapter into an AC socket and the bottom of the **SupremeFM™**
- Switch the **ON/OFF** switch on the side of the **SupremeFM™** to **ON**.
- Switch the **TV/Music** switch on the **SupremeFM™** to the appropriate setting.
- Extend the collapsible antenna on the **SupremeFM™**.
- Select an FM Frequency :** Unlock the settings by pressing on the red **LOCK** button until the "." in the FM frequency window is blinking. Then select an FM frequency by pressing on the Frequency arrows...up or down. (See the helpful information below about selecting a vacant FM channel.
- Volume:** Adjust the Volume by pressing on the Volume arrows...up or down until there are several green dots...but no red dot showing.
- Tune in your individual FM receiver to the selected FM channel to double check the Volume level.
- Locking:** After making the above selections, press the red **LOCK** button to preserve those settings. To change them at a later point in time, simply press **LOCK** again to make new selections.



Please contact us with any questions.

Finding a vacant FM channel :

- Go to www.Radio-Locator.com.
- Click on **Find unused frequencies on the FM dial**.
- Enter your **ZIP CODE** (at bottom under **Enter Your Location** and then click on **GO**).
- Verify Frequency:** You must tune an FM receiver to the selected channel to make certain that it is really vacant, before you broadcast on it.
- Tune your **SupremeFM™** transmitter to one of the frequencies in the **BEST VACANT CHANNELS** column.
- Also use the other listed **BEST VACANT CHANNELS** if you are using multiple transmitters.